



Printed using VOC (Volatile Organic Compound)-free vegetable oil based ink.

Radio Cassette Player

Operating Instructions
使用说明书


http://www.sony.net/

*"WALKMAN" is a trademark of Sony Corporation.



WM-FX888

Sony Corporation ©2001 Printed in Malaysia

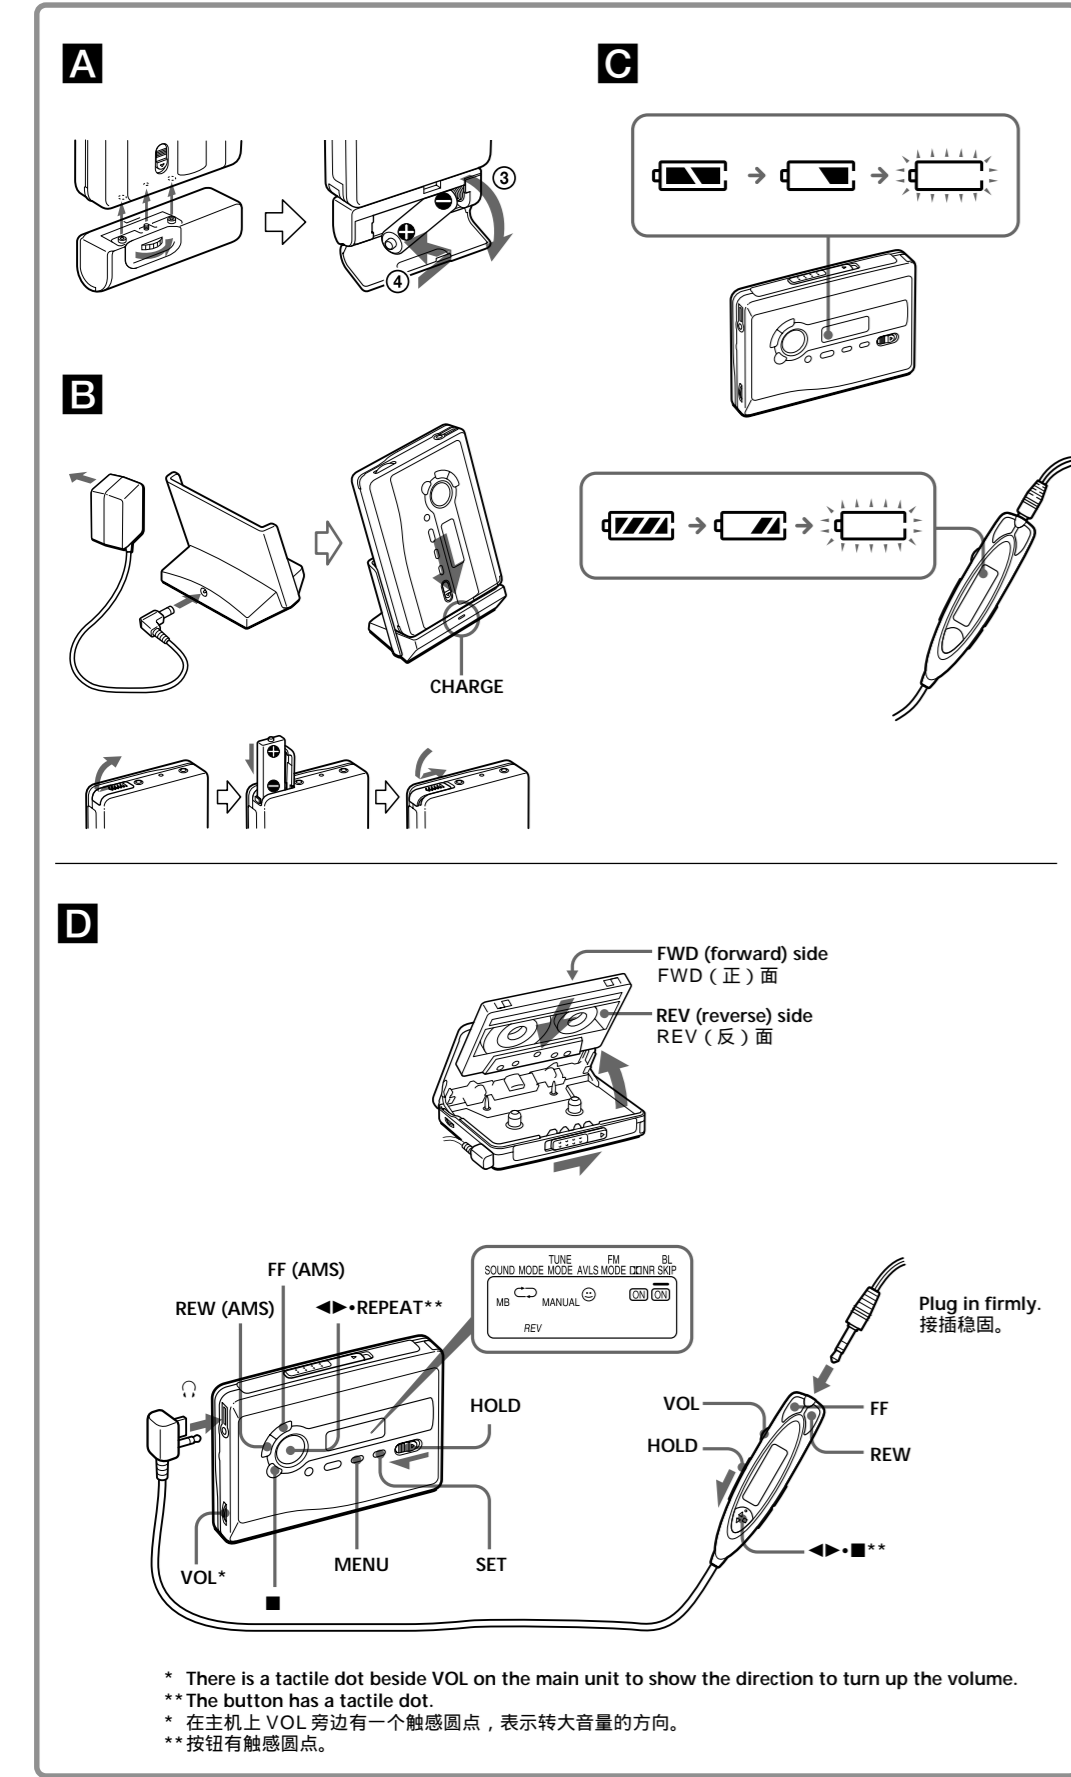

* There is a tactile dot beside VOL on the main unit to show the direction to turn up the volume.
** The button has a tactile dot.
* 在主机上 VOL 旁边有一个触感圆点，表示转大音量的方向。
** 按钮有触感圆点。

English

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

- To prevent fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And don't place lighted candles on the apparatus.
- To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.
- Certain countries may regulate disposal of the battery used to power this product. Please consult your local authority.

Preparations

Prepare a dry battery (not supplied) or the rechargeable battery (supplied).

Dry Battery A

Attach the supplied battery case, and then insert one R6 (size AA) battery with correct polarity.

Note

- For maximum performance we recommend that you use a Sony alkaline battery.

Rechargeable Battery B

- Insert the supplied rechargeable battery (NC-6WM) into the rechargeable battery compartment with correct polarity.
- Connect the supplied AC power adaptor to the charging stand, plug in the AC power adaptor to the house current (mains).
- Place the main unit on the charging stand. The CHARGE lamp will light up. Full charging takes about 10 hours.

You can charge the battery about 300 times.

Note

- Do not use the unit while charging. Remove the unit from the charging stand when using it.
- If you operate the unit while charging, the battery will not be charged.
- If you operate the unit while charging, it may cause malfunction.
- Do not place the unit on the charging stand without the rechargeable battery. Otherwise, it may cause malfunction.

Note on the AC power adaptor

Use only the supplied AC power adaptor. Do not use any other AC power adaptor.

When to replace/charge the battery C

Replace or charge the battery when "□" flashes in the display.

Battery life (Approx. hours)	(JEITA*)
Sony alkaline LR6 (SG)**	
Tape playback	36
Radio reception	32

Rechargeable battery (NC-6WM)	
Tape playback	10
Radio reception	10

Sony alkaline LR6 (SG)** and Rechargeable NC-6WM	
Tape playback	45
Radio reception	42

* Measured value by the standard of JEITA (Japan Electronics and Information Technology Industries Association). (Using a Sony HF series cassette tape)
**When using a Sony LR6 (SG) "STAMINA" alkaline dry battery (produced in Japan).

Note

- The battery life may be shorter depending on the operating condition, the surrounding temperature and battery type.

Playing a Tape D

- Insert a cassette and if the HOLD function is on, slide the HOLD switch in the opposite direction of the arrow to unlock the controls.
- Press ◀▶ (play) • ■ (stop) on the remote control and adjust the volume with VOL. (On the main unit, press ◀▶ • REPEAT.)

When adjusting the volume on the main unit Set the VOL control on the remote control at maximum.

When adjusting the volume on the remote control Set the VOL control on the main unit to around 6.

Operation on the remote control

To	Press
Switch playback to the other side during playback	◀▶ • ■ for 2 seconds or more
Stop playback	◀▶ • ■ once during playback
Repeat the current track (Repeat Single Track function)	◀▶ • ■ twice during playback To stop a single repeat, press ◀▶ • ■ once.

Operation on the main unit

To	Press
Switch playback to the other side	◀▶ • REPEAT during playback
Stop playback	■ (stop)
Repeat the current track (Repeat Single Track function)	◀▶ • REPEAT for 2 seconds or more during playback To stop a single repeat, press it again.

Other tape operations

To	Press
Fast forward*	FF
Rewind*	REW
Play the next track/succeeding 9 tracks from the beginning (AMS**)	FF once/repeatedly during playback
Play the current track/previous 8 tracks from the beginning (AMS**)	REW once/repeatedly during playback
Play the other side from the beginning (Skip Reverse function)	FF for 2 seconds or more during stop
Play the same side from the beginning (Rewind Auto Play function)	REW for 2 seconds or more during stop

* If ◀▶ • ■ on the remote control is pressed during fast forward or rewind, the Walkman switches to playback.
**Automatic Music Sensor

Adjusting playback modes

To select playback direction mode Press MENU repeatedly to set the cursor in the display to MODE. Then press SET to select the desired mode.

To play	Select
both sides repeatedly	↔
both sides once from the FWD side	↶

To skip a long space between tracks (BL SKIP* function)

- On the main unit:
- Press MENU repeatedly to set the cursor in the display to BL SKIP.
 - Press SET to show "Ⓞ".

On the remote control:

- Press MODE repeatedly to show "BL SKIP".

* The tape is fast-forwarded to the next track if there is a blank space longer than 12 seconds.

To play a tape recorded with Dolby* NR system

Press MENU repeatedly to set the cursor in the display to □ NR (Dolby noise reduction). Then press SET to show "Ⓞ".

* Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

中文

警告

为防火灾或触电危险，切勿让机器暴露于雨中或潮湿处。

别把装置安装在例如书橱或壁橱等密不通风的地方。

- 为防止火灾，注意别让报纸，桌巾，窗帘等盖住装置的通风孔。也不把可燃的蜡烛放在装置上。
- 为防火灾或触电的危险，请别将装满液体的，例如花瓶等放在装置上面。
- 一部分国家对本产品的电源用电池的处置，可能有所规定。此请咨询当地有关当局。

准备工作

准备干电池（无附带）或充电电池（附带）。

干电池 A

安装附带的电池盒，然后对正确极性装入一节 R6 (AA, 3号) 电池。

注

- 为获得最佳效果，建议您使用 Sony 牌碱电池。

充电电池 B

- 以正确极性将附带的充电电池 (NC-6WM) 装入充电器。
- 将附带的 AC 电源转接器连接到充电器架，将 AC 电源转接器插到家庭用电源插座（主电源）。
- 把主机放在充电器架上。CHARGE 灯将点亮。完全充电需时大约 10 小时。

充电电池大约可充电使用 300 次。

注

- 充电中，请别使用机器，要使用机器时，须把机器从充电器架上卸下来。
- 充电中，您如果操作机器，电池便不能进行充电了。
- 充电中，您如果操作机器，便可能引起故障。
- 别把没有安装充电电池的机器装在充电器架上。否则便可引起故障。

AC 电源转接器须知

限使用附带的 AC 电源转接器。请别利用任何别的 AC 电源转接器。



何时更换电池 / 给电池充电 C

"□" 在显示窗中闪烁时，即请更换电池或给电池充电。

电池寿命 (大约时数)	(JEITA*)
Sony 碱电池 LR6 (SG)**	
录音带放音	36
听收音机	32

充电电池 (NC-6WM)	
录音带放音	10
听收音机	10

同时使用 Sony 碱电池 LR6 (SG)** 和充电电池 NC-6WM	
录音带放音	45
听收音机	42

* 按 JEITA (Japan Electronics and Information Technology Industries Association) (日本电子和信息产业协会) 标准测定的值。(使用 Sony HF 系列磁带)
**使用 LR6 (SG) 型 Sony "STAMINA" 碱电池 (日本制) 时。

注

- 电池寿命，可能因操作条件，环境温度 and 电池型式而缩短些。

播放录音带 D

- 装入盒带，如果遥控器的 HOLD 功能仍开着，即请沿相反于箭头方向滑动 HOLD 开关以释放控制器。
- 按遥控器上的 ◀▶ (放音) • ■ (停止) 并用 VOL 旋钮调节音量。(主机上，则请按 ◀▶ • REPEAT。)

在主机上调节音量时 请把遥控器上的 VOL 控制设定于最大。

在遥控器上调节音量时 请把主机上的 VOL 控制设定于 6 左右。

在遥控器上的操作

要	请按
换播放另一面	播放中按 ◀▶ • ■ 2 秒以上
停止播放	播放中按一次 ◀▶ • ■
反复现在放音中曲子 (反复一曲功能)	播放中按两次 ◀▶ • ■ 要停止一曲反复放音时，请按一次 ◀▶ • ■。

在主机上的操作

要	请按
换播放另一面	播放中按 ◀▶ • REPEAT
停止播放	按 ■ (停止)
反复现在放音中曲子 (反复一曲功能)	播放中按 ◀▶ • REPEAT 2 秒钟以上。 要停止一曲反复放音时，请再按一次。

其他磁带操作

要	请按
快进绕*	FF
重绕*	REW
从头播放下一曲 / 接下 9 首曲子 (AMS**)	播放中按一次 / 反复按 FF
从头播放现在放音中曲子 / 前面 8 首曲子 (AMS**)	播放中按一次 / 反复按 REW
从头播放另外一面 (跳越倒绕功能)	停止中按 FF 2 秒以上
从头播放同一面 (重绕自动播放功能)	停止中按 REW 2 秒以上

* 如果在快进绕或重绕过程中按了遥控器上的 ◀▶ • ■，Walkman 将转换为放音。
** 自动乐曲探测

调整放音模式

要选择播放方向模式时 请反复按 MENU 把显示器中的游标设定于 MODE。然后按 SET 以选择所要模式。

要	请选择
反复放双面	↔
从 FWD 面放一次双面	↶

要跳越曲子间的长空间时 (BL SKIP* 功能)

- 在主机上:
- 反复按 MENU，将显示器中的游标设定于 BL SKIP。
 - 按 SET，使显示 "Ⓞ"。

在遥控器上:

- 反复按 MODE 以显示 "BL SKIP"。

* 如果曲间空白长于 12 秒，磁带即将快进绕到下一曲。

要播放用杜比* 减噪系统录的录音带时 反复按 MENU 把显示器中的游标设定于 □ NR (标比减噪)，然后按 SET 以显示 "Ⓞ"。

* 经杜比实验室授权生产。"杜比"，"Dolby" 和双 D 标志是杜比实验室的商标。

(接反面)

(turn over)

