

# Radio Cassette Player

## Operating Instructions

### 使用說明書



## WM-FS566

© 2004 Sony Corporation Printed in China



http://www.sony.net/

“WALKMAN” is a registered trademark of Sony Corporation to represent Headphone Stereo products.

is a trademark of Sony Corporation.

The validity of the CE marking is restricted to only those countries where it is legally enforced, mainly in the countries EEA (European Economic Area).

CE 標誌的有效性，僅限於那些有法律限制的國家，主要在 EEA（歐洲經濟區）國家。

### English

## Precautions

### On battery

- Do not carry dry batteries with coins or other metallic objects. It can generate heat if the positive and negative terminals of the batteries are accidentally contacted by a metallic object.
- When you are not going to use the Walkman for a long time, remove the battery to avoid any damage caused by battery leakage and subsequent corrosion.

### On handling

- Do not leave the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust or sand, moisture, rain, mechanical shock, or in a car with its windows closed.
- We do not recommend the use of tape longer than 90 minutes. They are very thin and tend to be stretched easily. This may cause malfunction of the unit or sound deterioration.
- The LCD display may become hard to see or slow down when using the unit at high temperatures (above 40°C/104°F) or at low temperatures (below 0°C/32°F). At room temperature, the display will return to its normal operating condition.
- If the unit has not been used for a long time, set it in the playback mode to warm it up for a few minutes before you start using again.

### On water resistance

- Before opening or closing the cassette lid, be sure to wipe off water, dust or sand on the exterior of the Walkman. (The Walkman is not water-resistant with the cassette lid open.)
- Since water in the headphones/earphones jack may cause rust, cover it with the attached rubber cap when the headphones/earphones are not in use.
- Since the Walkman is airtight, you may not be able to open the cassette lid because of sudden change in air pressure inside the Walkman, which happens after being transported on a plane or moving from a warm place to a cold place. To open the cassette lid see “Troubleshooting”.
- The supplied headphones/earphones are not meant to be immersed in water or come in continuous contact with water. If they are accidentally dropped into water or get wet, dry them with a soft cloth. Never use an electric hair dryer.
- If the Walkman or the headphones/earphones are immersed in salt water, be sure to wash them in non-running fresh water. Never wash them under running water, and never use soap or detergent.
- Any sand or dust on the rubber packing will prevent the cassette lid from closing tightly, and water may leak in. Brush off the dust once in a while.
- We recommend the packing to be changed every year. Replacement packing is available at an authorized Sony Service Facility.

### On headphones/earphones

#### Road safety

Do not use headphones/earphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headphones/earphones at high volume while walking, especially at pedestrian crossings. You should exercise extreme caution or discontinue use in potentially hazardous situations.

#### Preventing hearing damage

Do not use headphones/earphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use.

#### Caring for others

Keep the volume to a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

### On maintenance

- Clean the tape head and tape path using a cotton swab and commercially available cleaning solvent after every 10 hours of use.
- To clean the exterior, use a soft cloth slightly moistened in water. Do not use alcohol, benzine or thinner.
- Clean the headphones/earphones plugs periodically.

## Preparations

### To use the arm belt

- Pass the belt through another side of arm belt clip.
- Slide the arm belt clip into the slot at the rear of the Walkman to lock it.
- Wear the arm belt on your arm, then tighten and tape it to fit your arm.

### To vary the length of the arm belt to fit your arm

Move the velcro fastener to the proper position.

### To remove the arm belt from the Walkman

While pulling "LIFT RELEASE" of the arm belt clip, slide to remove it.

### To use the belt clip

- Slide the belt clip into the slot at the rear of the Walkman to lock it.
- Use the belt clip to attach the Walkman to your belt.

### To remove the belt clip from the Walkman

While pulling "LIFT RELEASE" of the belt clip, slide to remove it.

### To insert a battery

- Unfasten the buckle.
- Open the cassette lid.
- Release the catch to open the battery compartment lid and insert one R6 (size AA) dry battery with correct polarity.

### When to replace the battery

Replace the battery with the new one when “” flashes in the display.

### To replace the battery

- Release the catch to open the battery compartment lid.
- Pull the ribbon up slowly and replace the battery with new one.

## Using the supplied headphones

### Wearing the headphones

The following procedures are for wearing on the left ear.

- Hook the part over your left ear and the part over your right ear as illustrated.
- Hook the headphones around your ears, as you would with glasses.
- Adjust the earpieces to comfortably fit your ears.

### Notes on handling the supplied headphones

- Avoid rough handling or mechanical shock. Be particularly careful of the headphone part.
- Do not put force or weight on the unit for a long time as that may damage or deform the unit.
- Do not leave the unit in a location subject to moisture, dust, smoke, steam or direct sunlight.
- Clean the plug with a soft dry cloth. A dirty plug may cause the sound quality to deteriorate.
- Clean the headphone part with a soft dry cloth.
- After you use the headphones, keep them with the cord slider positioned high to avoid entangling the cord.

## Using Other Functions

### Locking the controls

Turn the HOLD switch to the direction of the arrow to lock the controls. The HOLD function only locks the radio operation buttons, MENU, SET, ENTER, PRESET/TUNING + or – and VOL + or –.

### Emphasizing bass sound

Press MENU repeatedly to set the cursor to MB (mega bass) in the display. Then, press SET to turn MB on. With each press, the indications change as follows:  
MB (mega bass) : emphasizes bass sound  
No message: off (normal)

#### Notes

- If the sound is distorted with the mode “MB”, turn down the volume or select normal mode.
- Bass emphasis may not show great effect if the volume is turned up too high.

### Protecting Your Hearing — AVLS (Automatic Volume Limiter System)

Press MENU repeatedly to set the cursor to AVLS in the display. Then press SET to show “”. The maximum volume is kept down to protect your ears.

### 中文

## 使用前須注意

### 電池須知

- 不要把乾電池和硬幣或其他金屬小件放在一起攜帶。因為電池的正負極如果同時與金屬小件接觸而通電，將產生熱。
- 當長期間不要使用 Walkman 時，請取出電池以免因電池漏液而腐蝕損壞機器。

### 處理須知

- 別把機器放在靠近熱源或會直接照射到陽光，多沙塵或潮濕，會淋到雨，有機械衝擊的地方，或放在關閉著門窗的汽車裡。
- 請不要使用 90 分鐘以上長度的盒帶，這些盒帶很薄，容易被拉伸。這可能導致本機故障或音質變差。
- 在高溫（40°C 以上）或低溫（0°C 以下）環境中使用機器時，液晶顯示器可能變成較難看清。但如果放在室溫中，顯示器便可恢復正常的功能。
- 機器如果長期放置沒用，請打開成播放模式並等數分鐘之後再開始使用機器。

### 耐水須知

- 要打開或關上蓋子之前，一定要擦乾 Walkman 外面的水分，塵埃或沙粒。（當打開著機蓋時，Walkman 是不耐水的。）
- 頭戴耳機／耳機插孔中如果留有水分，可能引起生鏽。不用頭戴耳機／耳機時，請蓋上附有的橡皮罩。
- Walkman 是完全密封的。當 Walkman 內部氣壓發生變化時，您可能會打不開蓋子。例如容易發生在飛行中的飛機裡或從溫暖處搬到寒冷處。此時，要打開蓋子，請參看“故障排除”。
- 附帶的頭戴耳機／耳機並不能浸水或連續接觸著水分。如果不慎掉進水裡，或弄潮濕了，即請用軟布擦乾。切勿吹風機吹乾。
- Walkman 或頭戴耳機／耳機如果浸了鹽水，即請用非流動的淡水洗淨。不可用流動的淡水洗，也不可使用肥皂或洗滌劑。
- 橡皮襯墊上如果沾有沙塵，將會妨礙關閉時的密封性。因此，可能會漏水。每次都請刷乾淨其上面的塵埃。
- 襯墊最好能每年更換一次。更換用襯墊，可在指定的 Sony 服務中心買到。

### 頭戴耳機／耳機須知

#### 路上安全

在駕車，騎單車或操作任何機動車輛時，請勿使用頭戴耳機／耳機。因為可能會引起交通事故，某些地區甚至有法律禁止使用。步行中，尤其是在橫渡馬路時，如果用大音量使用頭戴耳機／耳機也會有潛在性危險的。

#### 預防損傷聽覺

別用太大音量聽頭戴耳機／耳機。聽覺專家勸告避免連續，大聲地使用耳機。您的耳朵若有耳鳴經驗，便須減小音量或不連續使用耳機。

#### 其他顧慮

保持適當的音量聽耳機。這不但可以同時聽到您周圍的動靜，還可顧慮到周圍人們的安寧。

#### 保養須知

- 每使用了 10 個小時，即請用棉棒和市售清潔液清潔一下磁頭和磁帶通道。
- 要清潔機殼時，請用軟布輕蘸濕水分擦拭。不可使用酒精，汽油或稀釋溶劑。
- 定期清潔頭戴耳機／耳機插頭。

## 準備使用

### 使用臂帶

- 將臂帶從臂帶夾另一邊穿出。
- 將臂帶夾推入 Walkman 背面的插槽，即可固定 Walkman。
- 戴上臂帶，然後調整到合適的鬆緊度。

### 調整臂帶長度到合適的鬆緊度

將魔鬼沾扣移到合適位置。

### 要由 Walkman 上將臂帶移除

請拉住臂帶夾的“LIFT RELEASE”並向外拉出，即可將它移除。

### 使用皮帶夾

- 將皮帶夾推入 Walkman 背面的插槽，即可固定 Walkman。
- 使用皮帶夾將 Walkman 固定在皮帶上。

### 要由 Walkman 上將皮帶夾移除

請拉住皮帶夾的“LIFT RELEASE”並向外拉出，即可將它移除。

### 要裝電池時

- 鬆開扣環。
- 打開磁帶槽蓋。
- 釋放卡抓打開電池座蓋，裝入一個 R6（AA，3 號）乾電池，令對準確極性。

### 何時更換電池

當顯示器中閃爍著“”時，即請更換一個新電池。

### 要更換電池時

- 釋放卡抓以打開電池座蓋。
- 慢慢地拉出絲帶並更換新電池。

## 使用隨附頭戴耳機

### 配戴頭戴耳機

以下步驟為將頭戴耳機配戴到左耳的方式。

- 將 零件掛在左耳， 零件掛在右耳，如圖所示。
- 如同戴眼鏡一般，將頭戴耳機掛在耳朵上。
- 將耳機調整到適合耳朵的舒適程度。

### 使用隨附頭戴耳機時的注意事項

- 請避免粗暴行為或碰撞。特別小心頭戴耳機部分。
- 切勿長期施壓，以免損壞或變形。
- 切勿放置於溫度高、灰塵多、煙霧大、蒸汽多之處所、或陽光直接照射的地方。
- 用柔軟的乾布清理插頭。插頭髒污會影響音質。
- 用柔軟的乾布清理頭戴耳機。
- 用完頭戴耳機，請用頭戴耳機上方的收線器收好，以免電線纏在一起。

## 使用其他功能

### 鎖定控制器

把 HOLD 開關轉至箭頭方向以鎖定控制器。HOLD 功能只能鎖定收音機操作按鈕，MENU，SET，ENTER，PRESET/TUNING + 或 – 和 VOL + 或 –。

### 加強低音

重複按 MENU，把顯示器中的游標設定於 MB (mega bass)。然後按 SET 打開 MB。每按了按鈕，指示將改變如下。

MB (mega bass) : 加強低音  
無留言 : 關掉（正常）



#### 註

- “MB”模式時如果聲音失真，即請轉低音或選正常模式。
- 音量過大時，低音的加強效果可能不顯著。

### 保護聽覺 — AVLS（自動音量限制系統）

重複按 MENU，把顯示器中的游標設定於 AVLS。然後按 SET 以顯示“”。  
即能限制最大的音量以保護您的耳朵聽覺。

(接反面)

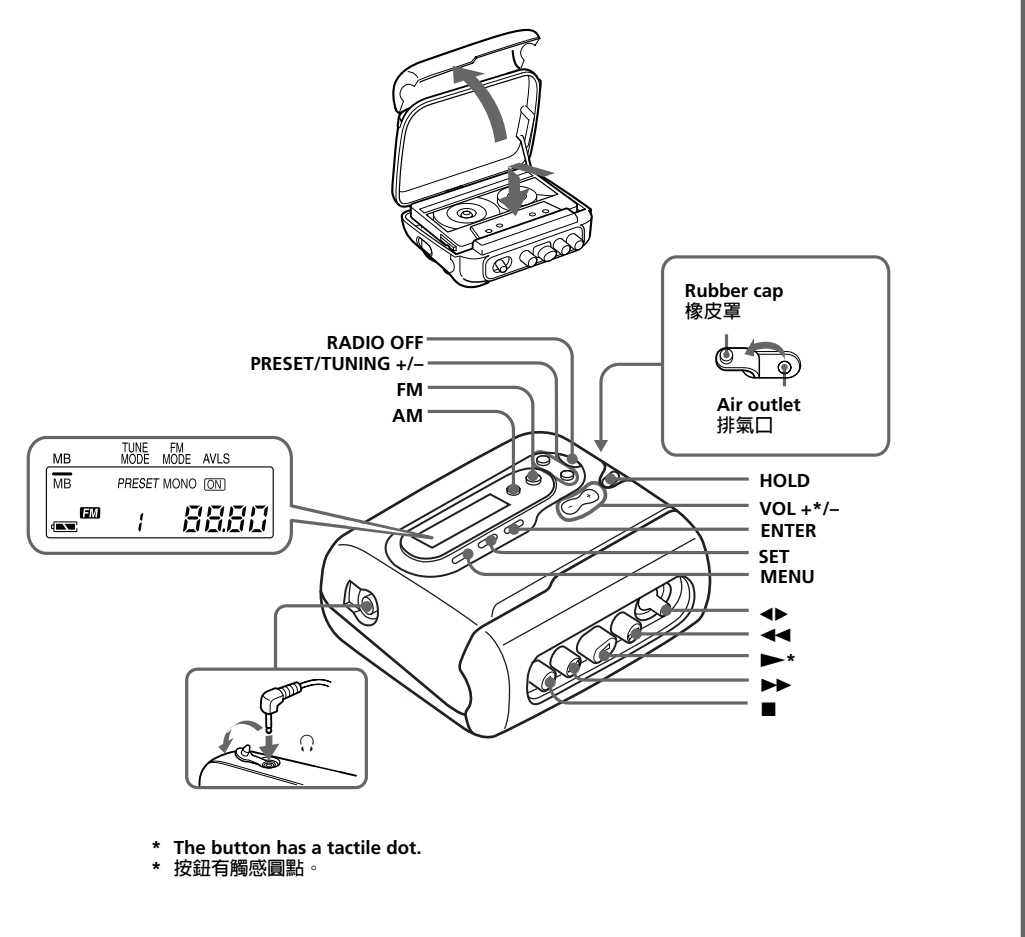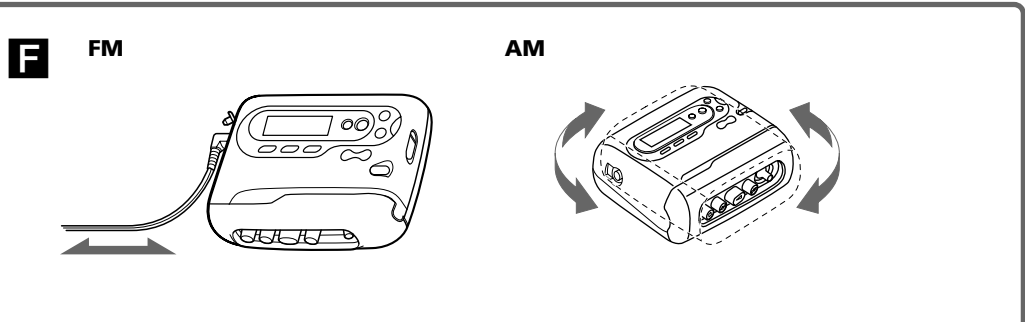

<p><b>Specifications</b></p> <ul style="list-style-type: none"><li><b>Frequency range</b> <div> <div>FM: 87.5 - 108 MHz</div> <div>AM: 530 - 1 710 kHz (North, Central and South America)</div> <div>531 - 1 602 kHz (Other countries)</div> </div></li> <li><b>Power requirements</b> <div>1.5 V DC, battery R6 (size AA) × 1</div></li> <li><b>Dimensions (w/h/d)</b> <div>Approx. 117.8 × 94.0 × 37.8 mm (4<span> </span>¼ × 3<span> </span>¾ × 1<span> </span>½ inches) (excluding projecting parts and controls)</div></li> <li><b>Mass</b> <div>Approx. 198 g (7.0 oz) (main unit only)</div></li> <li><b>Supplied accessories</b> <div>Stereo headphones or earphones (1)</div> <div>Arm belt with arm belt clip (1)</div> <div>Belt clip (1)</div></li></ul> <p>Design and specifications are subject to change without notice.</p>	
---	--

<p><b>規格</b></p> <ul style="list-style-type: none"><li><b>頻率範圍</b> <div> <div>FM：87.5～108MHz</div> <div>AM：530～1 710kHz（北美、中美和南美）</div> <div>531～1 602kHz（其他國家）</div> </div></li> <li><b>電源</b> <div>1.5V DC，電池R6（AA,3 號）× 1</div></li> <li><b>尺寸（寬／高／縱深）</b> <div>大約117.8 × 94.0 × 37.8mm（不含突出部分和控制器）</div></li> <li><b>質量</b> <div>大約198g（主機為限）</div></li> <li><b>隨機附件</b> <div>立體聲頭戴耳機或耳機（1）</div> <div>臂帶與臂帶夾（1）</div> <div>皮帶夾（1）</div></li></ul> <p>設計和規格有所變更時，恕不另行奉告。</p>	
--	--

English	
<b>Playing a Tape</b>	
<b>1</b> Unfasten the buckle.	
<b>2</b> Open the cassette lid and place a cassette.	
<b>3</b> Press <span>▶</span> . <p>Adjust the volume by pressing VOL + or −.</p>	
To	Press
Stop playback*	<span>■</span>
Wind rapidly**	<span>▶▶</span> or <span>◀◀</span>

\* Playback will switch automatically to the opposite side when the tape reaches the end of the side.
\*\*If you leave the Walkman after the tape has been wound or rewound, the battery will be consumed rapidly. Be sure to press ■.

**Note**
Do not open the lid of the cassette compartment while the tape is running.

**To select the tape direction**
Switch ◄▶ to select the desired direction.

## Listening to the Radio

- If the HOLD function is on, turn the HOLD switch in the opposite direction of the arrow to unlock the controls. Make sure that the tape has stopped completely.
- Press FM or AM to select the desired band and to turn on the radio.
- For manual tuning:**
  - Press MENU repeatedly to set the cursor in the display to TUNE MODE and press SET to choose “MANUAL”.
  - Press PRESET/TUNING + or − repeatedly to tune in to the desired station. Hold down PRESET/TUNING + or − for a few seconds to scan for stations.

**For preset tuning:**

- Press MENU repeatedly to set the cursor in the display to TUNE MODE and press SET to choose “PRESET”.
- Press PRESET/TUNING + or − repeatedly to recall the desired preset station.

To use preset tuning, preset the stations first (see “Presetting Radio Stations”).

<p><b>Battery life* (approximate hours)</b></p>			
	<b>Tape playback</b>	<b>Radio reception</b>	
Sony alkaline LR6 (SG)**	35	50	
Sony R6P (SR)	10	15	

\* Measured value by the standard of JEITA (Japan Electronics and Information Technology Industries Association). (Using a Sony HF series cassette tape)
\*\*When using a Sony LR6 (SG) alkaline dry battery (produced in Japan).

**Note**
The battery life may be shorter depending on the operating condition, the surrounding temperature and battery type.

<p><b>電池使用時間*（大約時數）</b></p>			
	<b>播放磁帶</b>	<b>聽收音機</b>	
Sony 鹼性電池 LR6（SG）**	35	50	
Sony R6P（SR）	10	15	

\* 按JEITA(Japan Electronics and Information Technology Industries Association) 標準測定的值（使用Sony HF系列磁帶）。
\*\*當使用 Sony LR6(SG)鹼性乾電池（日本製）時。

**註**
根據操作條件，環境溫度和電池類型，電池使用時間可能會縮短一些。

### Presetting Automatically Scanned Stations

- Press FM or AM.
- Press ENTER for more than 3 seconds. Preset number 1 will flash in the display and the Walkman starts scanning the stations from the lowest frequency and stops for about 5 seconds when a station is received.
- If you wish to preset the received station, press ENTER while the preset number is flashing. The received station is preset on preset number 1 and the unit starts scanning for the next receivable station.
- Repeat Step 3 until all receivable stations are preset.

**To stop scanning**
Press RADIO OFF. The radio is turned off at the same time.

**Notes**

- If stations are already stored, the newly preset stations replace the old ones when the above procedure is completed.
- If stations cannot be preset automatically, preset stations manually.

### Presetting Stations Manually

- Press FM or AM.
- Press ENTER. The frequency digits will flash in the display.
- While the frequency digits are flashing, tune in to a station you wish to store using PRESET/TUNING + or − and press ENTER. The preset number will flash in the display.
- While the preset number is flashing, select the preset number you want using PRESET/TUNING + or − and press ENTER.

**Notes**

- If you cannot complete step 3 or 4 while the indications are flashing, repeat from step 2.
- If a station is already stored, the new station replaces the old one.

#### Playing the Preset Radio Stations

- Press FM or AM.
- Press MENU repeatedly to set the cursor in the display to TUNE MODE. Then press SET to choose “PRESET”.
- Press PRESET/TUNING + or −.

**To cancel a stored station**

- Follow the procedure above and in step 3, select the preset number you want to cancel and then press ENTER. The frequency digits will flash in the display.
- Press and hold PRESET/TUNING + or −. The frequency digits start running up or down. Keep holding down the button until “- - - -” is displayed.
- Press ENTER while “- - - -” is flashing. A preset number will flash in the display.
- Press ENTER to cancel the stored station.

#### Scanning the Preset Radio Stations — DAPS (Digital Auto Preset Scanning)

- Press FM or AM.
- Press and hold FM or AM pressed in step 1 for 2 seconds or more.

The preset stations of the selected band will be played for about 5 seconds each. (During DAPS the indicators in the display flash.)

- Press FM or AM again to select the station while the desired preset station is being played.

**Notes**

- If there are no stations stored, the DAPS function does not work.
- Until a station is selected in step 3, the DAPS function turned on in step 2 will continue.
- In step 2 or 3, if you select a band which you did not select in step 1 by pressing FM or AM, the newly selected band will be played normally.

## Troubleshooting

**The display shows incorrect information.**

- The battery is weak. Replace the battery with a new one.

**The display and the operation are not normal.**

- Remove the battery for 30 seconds or more, and then insert it again. If this does not solve the problem, remove the battery and leave the unit without battery for 30 minutes or more, and then insert it again. In this case, preset the stations again, since the preset stations are erased from the memory.

**The cassette lid cannot be opened.**

- Open the rubber cap, then open the cassette lid. When the cassette lid opens, remember to close the rubber cap to prevent intrusion of water.

**The sound is distorted.**

- Set the ◄▶ switch firmly to the correct position.

中文	
<b>播放磁帶</b>	
<b>1</b> 鬆開扣環。	
<b>2</b> 打開磁帶座蓋並裝入磁帶。	
<b>3</b> 按 <span>▶</span> 。 <p>按下 VOL + 或 − 可調整音量。</p>	
要	請按
停止播放*	<span>■</span>
快繞**	<span>▶▶</span> 或 <span>◀◀</span>

\* 當磁帶繞到了終端時，將自動地切換到反面。
\*\*在磁帶已繞完或重繞完時，您如果放置著 Walkman 不理，電池將會消耗得很快。一定請按 ■。

**註**
卡帶轉動時，切勿打開卡帶匣蓋。

**要選擇磁帶方向時**
開關 ◄▶ 以選擇所要的方向。

### 聽收音機

- 如果打開著 HOLD 功能，則請把 HOLD 開關推向相反於箭頭所指的方向以解鎖控制器。確認磁帶是否完全停住。
- 按 FM 或 AM 以選擇所要波段並打開收音機電源。
- 要手動調台時**
  - 反復按 MENU 以便將顯示上的游標設定在 TUNE MODE 並按 SET 以顯示“MANUAL”。
  - 反復按 PRESET/TUNING + 或 − 調入所要的電台。按住 PRESET/TUNING + 或 − 數秒以掃描電台。
- 要預設電台時**
  - 反復按 MENU 以便將顯示上的游標設定在 TUNE MODE 並按 SET 以顯示“PRESET”。
  - 反復按 PRESET/TUNING + 或 − 選出所要的預設電台。要使用預設電台時，請先預設電台（參見“預設電台”）。

**要關掉收音機時**
請按 RADIO OFF。

**要改善接收廣播狀況時**

- FM:** 請伸開頭戴耳機／耳機導線（也當天線用）。如果仍不能改善接收狀況，即請重複按 MENU 把顯示器中的游標設定於 FM MODE。然後按 SET 以便在“LOCAL”和皆非（DX），或“MONO（單耳聲）”和皆非（立體聲）之間切換用以找出最佳的接收狀況。
- AM:** 調整機器本身的方位。

### 預設電台

最多能預設 40 個電台—加拿大和／南美洲：30 個 FM 電台和 10 個 AM 電台。其他國家：35 個 FM 電台和 5 個 AM 電台。

#### 自動預設所掃描電台

- 按 FM 或 AM。
- 按 ENTER 3 秒以上。

預設號 1 將在顯示窗上閃爍。Walkman 開始從低頻段掃描電台，在接收到電台時停止約 5 秒鐘。
- 您如果要預設接收到的電台時，則請在閃爍著該預設號當中按 ENTER。所接收的電台即被預設在預設號 1 上面，然後機器再開始掃描下一個能接收的電台。
- 重複步驟 3 至預設好所有能接收的電台。

**要停止掃描時**
按 RADIO OFF。收音機即關掉電源。

**註**

- 如果已存儲有電台，當作了上述操作程序後，則新預設的電台將置換掉舊存有的電台。
- 如果不能自動預設電台，即請用手動預設電台。

#### 手動預設電台

- 按 FM 或 AM。
- 按 ENTER。

顯示窗中即閃爍著頻率數字。
- 當頻率數字閃爍時，請用 PRESET/TUNING + 或 − 調入您想儲存的電台，按 ENTER。預約號將閃爍於顯示窗中。
- 當預設號閃爍著時，請用 PRESET/TUNING + 或 − 選擇所要預設號並按 ENTER。

**註**

- 如果您不能在閃爍著指示燈中完成步驟 3 或 4 的操作，就請再從步驟 2 重新開始做。
- 如果已存儲有電台，則新預設的電台將取代舊存的電台。

### 播放預設電台

- 按 FM 或 AM。
- 反復按 MENU，將顯示窗中的游標設定於 TUNE MODE。然後按 SET 以顯示“PRESET”。
- 按 PRESET/TUNING + 或 −。

**要取消所儲存的電台時**

- 按照上述方法而在步驟 3 裡選擇所要取消的預設號，然後按 ENTER。顯示窗中即閃爍著頻率數。
- 按住 PRESET/TUNING + 或 −。頻率數開始增大或减小。按住該按鈕至顯示了“- - - -”。
- 當閃爍著“- - - -”時按 ENTER。顯示窗中即閃爍著預設號。
- 按 ENTER 以取消儲存的電台。

**掃描預設電台—DAPS (Digital Auto Preset Scanning)**

- 按 FM 或 AM。
- 按住步驟 1 中按的 FM 或 AM 兩秒或以上。所選波段的預設電台即各播放大約 5 秒。（在 DAPS 當中，顯示窗中將閃爍著指示燈。）
- 當播放著所要預設電台時，再按一次 FM 或 AM 以選擇電台。

**註**

- 如果沒儲存電台，DAPS 功能將不起作用。
- 步驟 2 裡的 DAPS 功能將繼續打開著一直到在步驟 3 裡已選擇了電台為止。
- 在步驟 2 或 3 裡，您如果選擇了在步驟 1 中並沒有利用按 FM 或 AM 選擇過的波段，新選波段即將以正常模式播放。

### 故障排除

**顯示器顯示錯誤的資訊。**

- 電池變弱了。請更換新的電池。

**顯示器和操作不正常。**

- 取出一下電池，等 30 秒或以上時間之後，再把它裝上。這仍然不能解決問題時，請再取出電池而讓沒裝電池的機器放置 30 分鐘或以上的時間之後再裝入電池。此時，請再預設一下電台。因為存儲器中的預設電台已被清除。

**不能打開機蓋。**

- 請打開橡皮罩，然後再打開機蓋。機蓋開著時，請記著要關上橡皮罩以防浸水。

**聲音失真。**

- 請把 ◄▶ 開關穩當設定於正確的位置。