

CD/DVD Player

Reference Guide _____ GB

參考指南 _____ CT

DVP-SR200P



WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

The mains lead must be changed only at a qualified service shop.

Batteries or batteries installed apparatus shall not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION

The use of optical instruments with this product will increase eye hazard. As the laser beam used in this CD/DVD player is harmful to eyes, do not attempt to disassemble the cabinet.

Refer servicing to qualified personnel only.

Precautions

- To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.
- The player is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the player itself has been turned off.
- Do not install this player in a confined space, such as a bookshelf or similar unit.
- Install the player so that the AC power cord (mains lead) can be unplugged from the wall socket immediately in the event of trouble.
- If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the player. Should this occur, the player may not operate properly. In this case, remove the disc and leave the player turned on for about half an hour until the moisture evaporates.

Lightning

For added protection for this set during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage to the set due to lightning and power-line surges.



Please recycle used batteries.


Note about the discs

Do not use the following discs:

- A disc that has a non-standard shape (e.g., card, heart).
- A disc with a label or sticker on it.

Region code

Your player has a region code printed on the back of the unit and only will play commercial DVDs (playback only) labelled with identical region codes. This system is used to protect copyrights.

Commercial DVDs labelled  will also play on this player.

Depending on the commercial DVD, there may be no region code indication, even though playing the commercial DVD is prohibited by area restrictions.



Region code

Copyrights

- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- “DVD+RW,” “DVD-RW,” “DVD+R,” “DVD+R DL,” “DVD-R,” “DVD VIDEO,” and “CD” logos are trademarks.
- MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.

About this manual

“DVD” may be used as a general term for commercial DVDs, DVD+RWs/DVD+Rs/DVD+R DLs (+VR mode) and DVD-RWs/DVD-Rs/DVD-R DLs (VR mode, video mode).

 
Playback

Control Menu display

Use the Control Menu to select a function and to view related information.

Press DISPLAY.

To change the Control Menu display, press DISPLAY again.

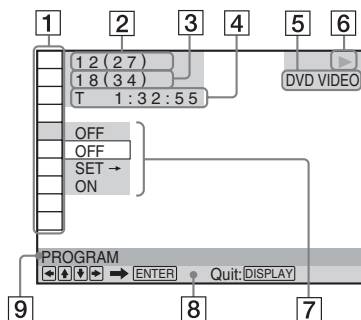

- 1 Control Menu items
- 2 Currently playing title/Total number of titles
- 3 Currently playing chapter/Total number of chapters
- 4 Playing time
- 5 Selected disc type
- 6 Playback status
- 7 Selected item icon/menu options
- 8 Operation message
- 9 Selected Control Menu item

Menu list

Item Item Name, Function

- TITLE/SCENE/TRACK
- CHAPTER/INDEX
- TRACK

Selects the title, scene, track, chapter, or index to be played.

TIME/TEXT

Checks the elapsed time and the remaining playback time.

Input the time code for picture and music search (DVD only).

TOP MENU/MENU

(DVD VIDEO only)

TOP MENU: Displays the top menu.

MENU: Displays the menu.

ORIGINAL/PLAY LIST

Selects the type of title (DVD-VR mode) to be played: ORIGINAL, or edited PLAY LIST.

PROGRAM*1, *2

Selects the title, chapter, or track to play in the order you want.

- 1 Select "SET →," then press ENTER and select the title (T), chapter (C), or track (T) you want to programme, and press ENTER.
- 2 Repeat selecting the title, chapter, or track.
- 3 Press .

SHUFFLE*1, *2

Plays the title, chapter, or track in random order.

REPEAT*1, *2

Plays all titles/tracks/albums or a single title/chapter/track/album/file repeatedly.

A-B REPEAT*1, *2

Specifies the parts you want to play repeatedly.

- 1 During playback, select "SET →," then press ENTER.
The "A-B REPEAT" setting bar appears.
- 2 When you find the starting point (point A), press ENTER.
- 3 When you reach the ending point (point B), press ENTER again.

PARENTAL CONTROL

Set to prohibit playback on this player.

PLAYER →: Playback of some DVD VIDEOS can be limited according to a predetermined level such as the age of the users. Scenes may be blocked or replaced with different scenes (Parental Control).

PASSWORD →: Enter a 4-digit password using the number buttons. Also use this menu to change the password.

Parental Control (limited playback)

You can set a playback limitation level.

- 1 Select "PLAYER →," then press ENTER.
Enter or re-enter your 4-digit password, then press ENTER.
- 2 Press ↑/↓ to select "STANDARD," then press ENTER.
Press ↑/↓ to select an area, then press ENTER.
When you select "OTHERS →," select and enter a standard code. See "PARENTAL CONTROL AREA CODE LIST" at the end of this manual.
- 3 Press ↑/↓ to select "LEVEL," then press ENTER.
Press ↑/↓ to select the level, then press ENTER.
Parental Control setting is complete.
The lower the value, the stricter the limitation.
To turn off the Parental Control function, set "LEVEL" to "OFF."

If you forget your password, enter "199703" in the password box, press ENTER, and then enter a new 4-digit password.

SETUP

QUICK: Use Quick Setup to choose the desired language of the on-screen display, the aspect ratio of the TV and the audio output signal.

CUSTOM: In addition to the Quick Setup setting, you can adjust various other settings (page 6).

RESET: Returns the settings in "SETUP" to the default setting.

ZOOM*¹

Magnifies the image up to four times the original size, scroll using ←/↑/↓/→.

ANGLE

Changes the angle.

CUSTOM PICTURE MODE

Selects the picture quality that best suits the programme you are watching.

STANDARD: Displays a standard picture.

DYNAMIC: Produces a bold dynamic picture by increasing the picture contrast and the colour intensity.

CINEMA: Enhances details in dark areas by increasing the black level.

MEMORY →: Adjusts the picture in greater detail.

SHARPNESS

Exaggerates the outline of the image to produce a sharper picture.

OFF: Cancels this option.

1: Enhances the outline.








2: Enhances the outline more than 1.

*¹ To return to normal play, select "OFF" or press CLEAR.

*² The play mode is cancelled when:

- you open the disc tray.
- you turn off the player.

◆Items for DATA discs

Item	Item Name, Function
	ALBUM
	Selects the album that contains music and photo files to be played.
	FILE
	Selects the photo file to be played.
	ALBUM
	Selects the album that contains the video file to be played.
	FILE
	Selects the video file to be played.
	DATE
	Displays the date the picture was taken by a digital camera.
	INTERVAL*
	Specifies the duration for which the slides are displayed on the screen.
	EFFECT*
	Selects the effects to be used for changing slides during a slide show.
	MODE 1: The images randomly cycle through the effects.
	MODE 2: The image sweeps in from top left to bottom right.
	MODE 3: The image sweeps in from top to bottom.
	MODE 4: The image sweeps in from left to right.
	MODE 5: The image stretches out from the centre of the screen.
	OFF: Turns off this function.



MEDIA

Selects the media type you want to play.

VIDEO: Plays video files.

PHOTO (MUSIC): Plays photo and music files as a slide show. You can view a slide show with sound when music and photo files are placed in the same album. If the playing time of either music or photos is longer, the longer one continues without sound or image.

PHOTO: Plays photo files.

MUSIC: Plays music files. Press **SUBTITLE** while playing music files that contain unsynchronized lyric information. The player supports MP3 ID3 Lyrics only.

* Depending on the file, this function may not be possible.

To change the colour system

If the on-screen menu of the player does not appear on the connected TV, switch the player's colour system to match the colour system of the TV (NTSC or PAL).

First turn off the player by pressing **I/⏻**. Next press **DISPLAY**, enter "0" using the number button, and then press **I/⏻** on the remote. The player turns back on, and the name of the colour system will appear on the front panel display.

To play VIDEO CDs with PBC functions

When you start playing a VIDEO CD with PBC (Playback control) functions, the menu for your selection appears.

To play without using PBC

Press **⏮/⏭** or the number buttons while the player is stopped to select a track, then press **▶** or **ENTER**. To return to PBC playback, press **■** twice, then press **▶**.

To lock the disc tray (Child Lock)

You can lock the disc tray to prevent it being opened by mistake.

When the player is in standby mode, press in order, **↶** RETURN, ENTER, and **I/⏻** on the remote.

The player turns on and "LOCKED" appears on the front panel display. The **▲** button does not work while the Child Lock is set.

To unlock the disc tray

When the player is in standby mode, press in order, **↶** RETURN, ENTER, and **I/⏻** on the remote again.

Controlling TVs with the remote

You can control the sound level, input source, and power switch of your Sony TV with the supplied remote.

If your TV is listed in the table below, set the appropriate manufacturer's code.


When you replace the batteries of the remote, set the appropriate code number again.

- 1 While holding down TV **I/⏻**, press the number buttons to select your TV's manufacturer's code.
- 2 Release TV **I/⏻**.

Code numbers of controllable TVs

Sony	01 (default)
Hitachi	02
LG/Goldstar/NEC	04
MGA/Mitsubishi	13
Panasonic	19
Philips	21
Pioneer	16
RCA	10
Samsung	20
Sharp	18
Toshiba	07

CUSTOM Menu

You can adjust various settings. Press DISPLAY when the player is in stop mode, select  (SETUP), and then select "CUSTOM." The CUSTOM menu appears.

Menu list

Item	Item Name, Function
------	---------------------

LANGUAGE SETUP

OSD (On-Screen Display): Switches the display language on the screen.

MENU*¹: Selects the desired language for the disc's menu. (DVD VIDEO only)

 
AUDIO*¹: Switches the language of the sound track. When you select "ORIGINAL," the language given priority in the disc is selected. (DVD VIDEO only)

SUBTITLE*¹: Switches the language of the subtitle recorded on the DVD VIDEO. When you select "AUDIO FOLLOW," the language for the subtitles changes according to the language you selected for the sound track. (DVD VIDEO only)

SCREEN SETUP

TV TYPE: Selects the aspect ratio of the connected TV.

16:9




4:3 LETTER BOX



4:3 PAN SCAN



COLOR SYSTEM (VIDEO CD): Selects the colour system when you play a VIDEO CD. If your TV is the DUAL system, select "AUTO."

SCREEN SAVER: When set to "ON," the screen saver appears when the player is in pause or stop mode for 15 minutes. Press  to turn off the screen saver.

BACKGROUND: Selects the background colour or picture on the TV screen. If you set "JACKET PICTURE," even though the disc does not contain a jacket picture, the "GRAPHICS" picture appears.

BLACK LEVEL: Selects the black level (setup level) for video signals output from the jacks other than COMPONENT VIDEO OUT.

BLACK LEVEL (COMPONENT OUT): Selects the black level (setup level) for video signals output from the COMPONENT VIDEO OUT jacks.

PROGRESSIVE (COMPONENT OUT ONLY)*²: Set to "ON" if your TV accepts progressive format signals. When you select "ON," set also the following "MODE (PROGRESSIVE)" and "4:3 OUTPUT." **MODE (PROGRESSIVE):** If you select "AUTO," the player detects the format (film-based or video-based), and converts to the appropriate version.

4:3 OUTPUT: This setting is effective only when you set "TV TYPE" to "16:9." Select "FULL" when you can change the aspect ratio on your TV.



CUSTOM SETUP

AUTO STANDBY: Sets the Auto Standby setting on or off. If you select "ON," the player enters standby mode when left in stop mode for more than 30 minutes.

AUTO PLAY: When set to "ON," the player automatically starts playback when the player is turned on by a timer (not supplied).

PAUSE MODE: Selects the picture in pause mode. Normally select "AUTO." When the picture is output in high resolution, set to "FRAME." (DVD only)

TRACK SELECTION: Gives the sound track which contains the highest number of channels priority when you play a DVD VIDEO on which multiple audio formats (PCM, MPEG audio, DTS, or Dolby Digital format) are recorded. If you select "AUTO," priority is given. (DVD VIDEO only)

MULTI-DISC RESUME: Switches the Multi-disc Resume setting on or off. Resume playback can be stored in memory for up to 6 different DVD VIDEOS/VIDEO CDs. If you start the settings again, the resume point is cleared. (DVD VIDEO/VIDEO CD only)

AUDIO SETUP

AUDIO DRC (Dynamic Range Control)^{*3}: Set according to the surrounding environment. Set to "TV MODE" when the smallest sounds are indiscernible, or set to "WIDE RANGE" when the listening environment is good, for example, in a home movie theatre.

DOWNMIX^{*3}: Switches the method for mixing down to 2 channels when you play a DVD which has rear sound elements (channels), or is recorded in Dolby Digital format.

Normally select "DOLBY SURROUND."

DIGITAL OUT: Selects if audio signals are output via the DIGITAL OUT (COAXIAL) jack. When you select "ON," set also the following "DOLBY DIGITAL," "MPEG," "DTS," or "48kHz/96kHz PCM."

 

DOLBY DIGITAL: Selects the type of Dolby Digital signal. Set to "D-PCM" when the player is connected to an audio component without a built-in Dolby Digital decoder.

MPEG: Selects the type of MPEG audio signal. Set to "MPEG" when the player is connected to an audio component with a built-in MPEG decoder.

DTS: Selects the type of DTS audio signal. Set to "ON" when you play a DVD VIDEO with DTS sound tracks. Do not set to "ON" when you connect the player to an audio component without a DTS decoder.

48kHz/96kHz PCM: Selects the sampling frequency of the digital audio output signal. (DVD VIDEO only)

^{*1} When you select "OTHERS →," select and enter a language code. See "LANGUAGE CODE LIST" at the end of this manual.

^{*2} If the picture does not appear normally or goes blank, reset the setting. Press  to turn off, enter "369," and then press  to turn on the player again.

^{*3} This function affects the output from the following jacks:
– AUDIO OUT L/R jacks.
– DIGITAL OUT (COAXIAL) jack only when "DOLBY DIGITAL" is set to "D-PCM."

Information

 
 
Troubleshooting

If you experience any of the following difficulties while using the player, use this troubleshooting guide to help remedy the problem before requesting repairs. Should any problem persist, consult your nearest Sony dealer.

The power is not turned on.

- Check that the power cord (mains lead) is connected securely.


There is no picture/picture noise appears.

- Re-connect the connecting cord securely.
- The connecting cords are damaged.
- Check the connection to your TV and switch the input selector on your TV so that the signal from the player appears on the TV screen.
- Change the colour system of the player (page 5).
- The disc is dirty or flawed.
- Press  to turn off the player, and enter "369" using the number buttons on the remote, then press  to turn on the player again.

There is no sound.

- Re-connect the connecting cord securely.
- The connecting cord is damaged.
- The player is in pause mode or in Slow-motion Play mode.
- The player is in fast forward or fast reverse mode.

The remote does not function.

- The batteries in the remote are weak.
- The remote is not pointed at the remote sensor  on the player.
- When you operate the player by pressing buttons on the remote in sequence, press the buttons within 5 seconds of each other.

The disc does not play.

- The disc is turned over.
Insert the disc with the playback side facing down.
- The disc is skewed.
- The player cannot play certain discs.
- The region code on the DVD does not match the player.
- Moisture has condensed inside the player.

→ The player cannot play a recorded disc that is not correctly finalized.

The player does not operate properly.

→ When static electricity, etc., causes the player to operate abnormally, unplug the player.

The disc tray does not open and “LOCKED” appears on the front panel display.

→ Child Lock is set (page 5).

The disc tray does not open and “E-LOCK” (TRAY LOCKED) appears on the front panel display.

→ Contact your Sony dealer or local authorized Sony service facility.

“C13” appears on the front panel display.

→ Clean the disc with a cleaning cloth or check its format.

“C31” appears on the front panel display.

→ Re-insert the disc correctly.

Playable file format

Video: MPEG-1 (Cyber-shot data)

Photo: JPEG (DCF format)

Music: MP3 (except for mp3PRO)/WMA (except for WMA Pro)*¹, *²/AAC*¹, *²/LPCM/WAVE

*¹ Files with copyright protection (Digital Right Management) cannot be played.

*² The player does not play coded files such as Lossless.

Supported extensions: “.mpg”, “.mpeg”, “.jpg”, “.mp3”, “.wma”, “.m4a”, “.wav”

Supported discs: DVD, DVD±RW/±R DL, Music CD/Super VCD, CD-R/-RW

- DATA CDs recorded according to ISO 9660 Level 1/Level 2, or its extended format, Joliet.
- DATA DVDs recorded according to UDF.
- The player will play any file in the above, even if the file format differs. Playing such data may generate noise that can result in speaker damage.
- To play a complex hierarchy of folders may take some time. Create albums with no more than two hierarchies.
- Some video, photo, and music files may not play, depending on the encoding/recording condition.

- To start playback and proceed to the next or another album/file may take some time.
- The player will recognize a maximum of 200 albums and 600 files. It can recognize up to 300 music files and 300 photo files when “PHOTO (MUSIC)” is selected.
- The player may not play a combination of two or more video files.
- The player cannot play a video file of size more than 720 (width) × 576 (height)/2 GB.
- Depending on the file, playback may not be smooth. You are recommended to create the file at a lower bit rate.
- The player may not play back the high bit rate video file on the DATA CD smoothly. You are recommended to play back using DATA DVD.

Note about recordable media

Some recordable media cannot be played on this player due to the recording quality or physical condition of the disc, or the characteristics of the recording device and authoring software. The disc will not play if it has not been correctly finalized. Also some DATA discs created in Packet Write format cannot be played.

For player that cannot play images that contain a copy protection only

Images in DVD-VR mode with CPRM (Content Protection for Recordable Media) protection may not be played.

Note on playback operations of DVDs and VIDEO CDs

Some playback operations of DVDs and VIDEO CDs may be intentionally set by software producers. Since this player plays DVDs and VIDEO CDs according to the disc contents the software producers designed, some playback features may not be available. Also, refer to the operating instructions supplied with the DVDs or VIDEO CDs.

Note on discs

This unit is designed to playback discs that conform to the Compact Disc (CD) standard. DualDiscs and some music discs encoded with copyright protection technologies do not conform to the Compact Disc (CD) standard. Therefore, these discs may not be compatible with this unit.

Specifications

System

Laser: Semiconductor laser

Outputs

- AUDIO OUT (L/R): Phono jack
- DIGITAL OUT (COAXIAL): Phono jack
- COMPONENT VIDEO OUT (Y, P_B, P_R): Phono jack
- VIDEO OUT: Phono jack

General

- Power requirements: 110 V AC, 60 Hz
- Power consumption: 6 W
- Dimensions (approx.): 320 × 38 × 209 mm (width/height/depth) incl. projecting parts
- Mass (approx.): 1.1 kg
- Operating temperature: 5 °C to 35 °C
- Operating humidity: 25 % to 80 %

Supplied accessories

- Audio/Video cord (phono plug × 3 ↔ phono plug × 3) (1)
- Remote commander (remote) (1)
- R6 (size AA) batteries (2)

Specifications and design are subject to change without notice.

警語

為減低火災或電擊危險，請勿讓本裝置暴露於雨水或濕氣。切勿打開機殼，以免觸電。僅有資格的維修人員才可維修。主電源線僅可在有資格的維修店更換。電池或安裝了電池的裝置不可過度受熱，例如陽光、火源或其他熱源。

小心

使用本機中的光學儀器將增加對眼睛的傷害。本 CD/DVD 播放機使用的鐳射光束對眼睛有害，因此不要試圖拆開機殼。僅有資格的維修人員才可維修。

關於本機

額定電壓：~110 V
額定頻率：60 Hz
消耗功率：6 W
製造日期：如機體上標示
機器號碼：如機體上標示
產地：中國
製造商：Sony Corporation
進口商：台灣索尼股份有限公司
中文地址：104 台北市長春路
145 號 5 樓
電話：4499111

注意事項

- 為了防止火災或電擊危險，請勿將花瓶等裝滿液體的物體放置在本機上。
- 只要本播放機的電源線仍連接在牆壁電源插座上，即使電源關閉，本機仍然未與交流電源斷開。
- 切勿將本播放機放置在書架或類似物的狹窄空間內。
- 請將播放機安裝為在故障時可立即從牆上電源插座中拔出交流電源線（主電源線）。
- 如果將本播放機直接從寒冷的地方搬到溫暖的地方，或放置在十分潮濕的房間，播放機內的透鏡會有濕氣凝結。如果發生此現象，本播放機可能無法正常操作。此時，請取出光碟，並將本機在電源接通的狀態下放置約半小時，直到濕氣蒸發。

閃電

為了對本裝置提供多一層的保護，閃電期間或是本裝置長時間置放未使用時，請拔掉連接電源插座的插頭。如此可避免因閃電和電源線路電壓突然增強造成本裝置損壞的情形。




廢電池請回收

關於光碟的注意事項

- 請不要使用下列光碟：
- 非標準形狀的光碟（例如，卡片片形、心形）。
 - 上面有標籤或貼紙的光碟。

地區代碼

您的播放機背面印有地區代碼，僅標有相同地區代碼的商用 DVD（僅限播放）才能在本機上播放。本系統用於版權保護。

本播放機也可播放帶  標籤的商用 DVD。

根據商用 DVD 的不同，有些受到地區限制而被禁止播放的商用 DVD，標籤上可能沒有地區代碼指示。



地區代碼

版權

- 由 Dolby Laboratories 授權製造。「杜比」、「Dolby」與雙 D 記號是 Dolby Laboratories 的商標。
- “DVD+RW”、“DVD-RW”、“DVD+R”、“DVD+R DL”、“DVD-R”、“DVD VIDEO”和“CD”標誌是商標。
- MPEG Layer-3 音訊編碼技術和專利由 Fraunhofer IIS 和 Thomson 授權。

關於本說明書

“DVD”可以作為 DVD、DVD+RW/DVD+R/DVD+R DL（+VR 模式）和 DVD-RW/DVD-R/DVD-R DL（VR 模式，視頻模式）的通用術語。

 
播放

控制選單顯示

使用控制選單選擇功能和查看相關資訊。

按 DISPLAY 鍵。

若要變更控制選單顯示，再次按 DISPLAY 鍵。

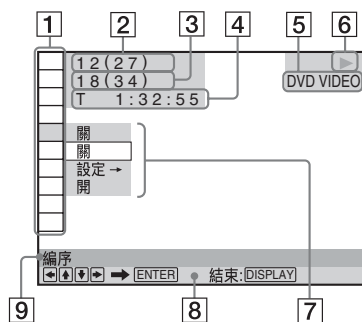

- 1 控制選單項目
- 2 當前播放的標題/標題總數
- 3 當前播放的章/章總數
- 4 播放時間
- 5 所選擇光碟類型
- 6 播放狀態
- 7 所選擇項目圖示/選單選項
- 8 操作資訊
- 9 所選擇的控制選單項目

選單列表

項目 項目名稱, 功能

標題 / 場面 / 軌跡

章 / 索引

軌跡

選擇要播放的標題、場面、軌跡、章或索引。

時間 / 文字

查看已播放時間和剩餘播放時間。
輸入圖像和音樂搜尋的時間代碼 (僅適用於 DVD)。

上部選單 / 選單

(僅適用於 DVD VIDEO)
上部選單: 顯示上部選單。
選單: 顯示選單。

原作品 / 播放目錄

選擇要播放的標題類型 (DVD-VR 模式): 原作品或已編輯的播放目錄。

編序 *1, *2

選擇標題、章或軌跡並以您希望的順序播放。

1 選擇“設定 →”，然後按 ENTER 鍵選擇您想要編序的標題 (T)、章 (C) 或軌跡 (T)，然後按 ENTER 鍵。

2 重複選擇標題、章或軌跡。

3 按 鍵。

隨機 *1, *2

以隨機順序播放標題、章或軌跡。

重複 *1, *2

反覆播放所有標題 / 軌跡 / 文件夾或單個標題 / 章 / 軌跡 / 文件夾 / 檔案。

A-B 重複 *1, *2

確定您要反覆播放的部分。

1 在播放過程中，選擇“設定 →”，然後按 ENTER 鍵。

出現“A-B 重複”設定橫條。

2 當您找到起始點 (A 點) 時，按 ENTER 鍵。

3 當您到達結束點 (B 點) 時，再次按 ENTER 鍵。

視聽者控制

在本播放機上設定為禁止播放。

播放機 →: 有些 DVD VIDEO 的播放可以根據使用者年齡加以限制。某些場面可能被其他場面阻擋或替代 (視聽者控制)。

改變密碼 →: 使用數字鍵輸入 4 位數密碼。也可使用此選單改變密碼。

視聽者控制（限制播放）

您可以設定播放限制等級。

- 1 選擇“播放機 →”，然後按 ENTER 鍵。
輸入或重新輸入您的 4 位數密碼，然後按 ENTER 鍵。
- 2 按 ↑/↓ 鍵選擇“標準”，然後按 ENTER 鍵。
按 ↑/↓ 鍵選擇地區，然後按 ENTER 鍵。
當您選擇“其他 →”時，選擇並輸入標準代碼。請參閱本手冊最後的“PARENTAL CONTROL AREA CODE LIST”。
- 3 按 ↑/↓ 鍵選擇“水平”，然後按 ENTER 鍵。
按 ↑/↓ 鍵選擇水平，然後按 ENTER 鍵。
視聽者控制設定完成。
視越低，限制越嚴格。
若要關閉視聽者控制功能，將“水平”設定為“關”。

如果您忘記了密碼，在密碼文字方塊中輸入“199703”，並按 ENTER 鍵，然後輸入新的 4 位數密碼。

設定

快速：使用快速設定選擇需要的螢幕顯示語言、電視機縱橫比和音頻輸出訊號。

常規：除設定快速設定以外，您也可以調節各種其他設定（第 6 頁）。

重新設定：將“設定”中設置恢復到預設位置。

放大 *¹

將原圖像尺寸最多放大四倍，並使用 ←/↑/↓/→ 鍵滾動顯示圖像。

角度

變更角度。

圖像模式選擇

選擇最符合您觀看節目的畫面品質。

標準：顯示標準圖像。

鮮亮：通過增加圖像對比度和色彩濃度來產生突出鮮亮的圖像。

電影：通過增加黑色等級增強黑色區域清晰度。

記憶 →：更細緻地調節圖像。

銳度

增強圖像輪廓從而產生更清晰的畫面。

關：取消此選項。

1：增強輪廓。

2：增強輪廓程度大於 1。

*¹ 若要恢復正常播放，選擇“關”，或按 CLEAR 鍵。

*² 在下列情況時，播放模式被取消：

- 打開光碟托盤。
- 關閉播放機。

◆DATA 光碟的項目

項目	項目名稱，功能
----	---------

文件夾

選擇包含要播放的音樂和相片檔案的文件夾。

文件

選擇要播放的相片檔案。

文件夾

選擇包含要播放的視頻檔案的文件夾。

文件

選擇要播放的視頻檔案。

日期

顯示數位相機拍攝此圖像的日期。

時間間隔 *

指定螢幕上顯示幻燈片的持續時間。

效果 *

選擇幻燈片放映過程中改變幻燈片時所採用的效果。

模式 1：圖像循環使用各項效果。

模式 2：圖像從左上側至右下側掠過。

模式 3：圖像從頂部至底部掠過。

模式 4：圖像從左側至右側掠過。

模式 5：圖像從螢幕的中間展開。

關：關閉此功能。

媒體

選擇要播放的媒體類型。

圖像：播放視頻檔案。

相片（音樂）：以幻燈片放映形式播放相片和音樂檔案。當音樂和相片檔案放在同一個文件夾內時，可以觀看有聲音的幻燈片。如果音樂或相片的播放時間比對方長，則較長的檔案將繼續播放，但沒有聲音或圖像。

相片：播放相片檔案。

音樂：播放音樂檔案。播放含不同步歌詞資訊的音樂檔案時按 SUBTITLE 鍵。本播放機只支援 MP3 ID3 歌詞。

* 視檔案而定，可能無法執行此功能。

若要更改彩色系統

若播放機的畫面選單未出現在所連接的電視機上，請將播放機的彩色系統更改為與此電視機相同的彩色系統（NTSC 或 PAL）。先按 **I/⏻** 鍵關閉播放機。接下來按 **DISPLAY** 鍵，使用數字鍵輸入“0”，然後按遙控器上的 **I/⏻**。播放機重新打開，彩色系統名稱將出現在前面板顯示屏上。

若要播放帶 PBC 功能的 VIDEO CD

當您開始播放帶 PBC（播放控制）功能的 VIDEO CD 時，將出現供您進行選擇的選單。

若不使用 PBC 功能播放

在播放機停止時按 **◀◀/▶▶** 或數字鍵以選擇一個軌跡，然後按 **▶** 鍵或 **ENTER** 鍵。若要返回 PBC 播放，按兩次 **■** 鍵，然後按 **▶** 鍵。

若要鎖定光碟托盤（兒童鎖定）

您可以鎖定光碟托盤以免被不小心打開。播放機處於待機模式時，依序按遙控器上的 **↶** RETURN 鍵、**ENTER** 鍵和 **I/⏻** 鍵。播放機電源打開且前面板顯示屏上出現“**LOCK**”（LOCKED）（已上鎖）。兒童鎖定功能設定時，**▲** 鍵無效。

若要解鎖光碟托盤

播放機處於待機模式時，再次依序按遙控器上的 **↶** RETURN 鍵、**ENTER** 鍵和 **I/⏻** 鍵。

用遙控器控制電視機

您可以用提供的遙控器控制 Sony 電視機的聲音電平、輸入源和電源開關。如果您的電視機包含在下表中，請設定適當的廠商代碼。當您更換遙控器電池時，請再次設定適當的代碼號。


1 按住 TV **I/⏻** 鍵的同時，按數字鍵選擇您的電視機製造商代碼。

2 鬆開 TV **I/⏻** 鍵。

可控制電視機的代碼號


Sony	01（預設）
Hitachi	02
LG/Goldstar/NEC	04
MGA/Mitsubishi	13
Panasonic	19
Philips	21
Pioneer	16
RCA	10
Samsung	20
Sharp	18
Toshiba	07

常規選單

您可以調節各種設定。
播放機處於停止模式時，按 DISPLAY 鍵，選擇  (設定)，然後選擇“常規”。出現常規選單。

選單列表

項目	項目名稱，功能
----	---------

	語言設定
----------------------------------------------------------------------------------	------

畫面顯示語言 (螢幕顯示)：切換畫面顯示語言。

選單語言 *1：為光碟選單選擇需要的語言。(僅適用於 DVD VIDEO)


聲音語言 *1：切換音軌語言。當選擇“原文”時，將選擇光碟優先設定的語言。(僅適用於 DVD VIDEO)

字幕語言 *1：切換錄製在 DVD VIDEO 上的字幕語言。當選擇“聲音連動”時，字幕語言根據您選擇的聲音軌跡語言而改變。(僅適用於 DVD VIDEO)

	畫面設定
----------------------------------------------------------------------------------	------

電視機形式：選擇所連接電視機的縱橫比。

 16:9




4:3 信箱形式



4:3 全景掃描



彩色系統 (VIDEO CD)：選擇播放 VIDEO CD 時的彩色系統。若您的電視機是 DUAL 系統，請選擇“自動”。

屏幕節能：如果設定為“開”，當播放機處於暫停或停止模式達 15 分鐘時，將出現屏幕節能。按  鍵關閉屏幕節能。

背景畫面：選擇電視機螢幕上的背景顏色或圖像。若設定為“封套畫面圖像”，即使光碟中未含封套畫面圖像，仍將出現“圖形”畫面。

黑色電平：選擇從 COMPONENT VIDEO OUT 以外的插孔輸出的視頻訊號的黑色電平 (設定等級)。

黑色電平 (COMPONENT OUT)：選擇從 COMPONENT VIDEO OUT 插孔輸出的視頻訊號的黑色電平 (設定等級)。

逐行 (僅限 COMPONENT OUT) *2：如果您的電視機接受逐行格式訊號，請設定為“開”。選擇“開”時，也要如下設定“模式 (逐行)”和“4:3 輸出”。

模式 (逐行)：如果選擇“自動”，播放機將檢測格式 (基於電影或基於視頻) 並轉換為適當的版本。

4:3 輸出：只有當“電視機形式”設定為“16:9”時此設定才有效。當在電視機上可以更改縱橫比時選擇“全屏幕”。



個人設定

自動待機模式：將自動待機模式設定為開或關。如果選擇“開”，當播放機處於停止模式超過 30 分鐘時，將進入待機模式。

自動播放：設定為“開”時，當播放機由定時器 (未提供) 打開時，播放機將自動開始播放。

暫停模式：選擇暫停模式的圖像。通常選擇“自動”。以高解析度輸出圖像時，設定為“幀”。(僅適用於 DVD)

聲音軌跡選擇：播放多音頻格式 (PCM、MPEG 音頻、DTS 或 Dolby Digital 格式) DVD VIDEO 時，有最多數量聲道的聲音軌跡優先播放。如果選擇“自動”，有優先級。(僅適用於 DVD VIDEO)

多重光碟續播：打開或關閉多重光碟續播設定。記憶體中可以儲存最多 6 張不同 DVD VIDEO/VIDEO CD 的重續播放。如果再次開始設定，續播點將清除。(僅適用於 DVD VIDEO/VIDEO CD)

🔊) 聲音設定

音頻動態範圍控制 *3: 根據環繞環境設定。難以辨別最小的聲音時設定為“電視機”，聆聽環境良好時設定為“寬波段”，例如在家庭劇院。

聲道合並 *3: 當播放帶有後置聲音元素（聲道）或以 Dolby Digital 格式錄製的 DVD 時，將合併的方式切換至 2 聲道。通常選擇“DOLBY SURROUND”。

數碼輸出: 通過 DIGITAL OUT (COAXIAL) 插孔輸出音頻訊號時選擇此項。選擇“開”時，也要如下設定“DOLBY DIGITAL”、“MPEG”、“DTS”或“48kHz/96kHz PCM”。**DOLBY DIGITAL**: 選擇 Dolby Digital 訊號類型。當播放機連接到無內建 Dolby Digital 解碼器的音頻裝置時，設定為“D-PCM”。

MPEG: 選擇 MPEG 音頻訊號類型。當播放機連接到帶內建 MPEG 解碼器的音頻裝置時，設定為“MPEG”。

DTS: 選擇 DTS 音頻訊號類型。播放帶 DTS 聲音軌跡的 DVD VIDEO 時，設定為“開”。當播放機連接到無 DTS 解碼器的音頻裝置時，不要設定為“開”。

48kHz/96kHz PCM: 選擇數位音頻輸出訊號的採樣頻率。（僅適用於 DVD VIDEO）

*1 當您選擇“其他 →”時，選擇並輸入語言代碼。請參閱本手冊最後的“LANGUAGE CODE LIST”。

*2 如果圖像顯示不正常或呈空白，請重設設定。按 **I/⏻** 鍵關閉，並輸入“369”，然後按 **I/⏻** 再次打開隨身聽。

*3 本功能會影響以下插孔輸出：
- AUDIO OUT L/R 插孔。
- DIGITAL OUT (COAXIAL) 插孔，僅限於當“DOLBY DIGITAL”設定為“D-PCM”時。

資訊

故障排除

在使用此播放機時，如遇到以下任何疑難問題，在要求維修前先使用故障排除指南幫助解決故障。如果無法解決問題，請就近與 Sony 經銷商聯繫。

無法打開電源。

→ 檢查電源線是否連接牢固。

無圖像/圖像有干擾。

→ 重新牢固地連接連接線。

→ 連接線有損壞。

→ 檢查與電視機的連接並切換電視機上的輸入選擇器，以使來自播放器的訊號出現在電視機螢幕上。

→ 改變播放機的彩色系統（第 5 頁）。

→ 光碟髒或有裂紋。

→ 按 **I/⏻** 鍵關閉播放機，使用遙控器上的數字鍵輸入“369”，然後按 **I/⏻** 鍵重新打開播放機。

沒有聲音。

→ 重新牢固地連接連接線。


→ 連接線有損壞。

→ 播放機處於暫停模式或慢動作播放模式。

→ 播放機處於快進或快倒模式。

遙控器沒有作用。

→ 遙控器電池電力不足。

→ 遙控器未對準播放機遙控感應窗 。

→ 依序按遙控器上的按鍵操作播放機時，請在 5 秒內按每一個按鍵。

無法播放光碟。

→ 光碟放反了。

播放面朝下插入光碟。

→ 光碟未放平。

→ 本播放器無法播放特定光碟。

→ DVD 地區代碼與播放機不相符。

→ 播放機內部有濕氣凝結。

→ 本播放機無法播放未正確完成最後處理的光碟。

播放機操作不正常。

→ 當靜電等導致播放機工作異常時，請拔出播放機電源插頭。

光碟托架打不開，前面板顯示屏上出現“LOCK”（LOCKED）（已上鎖）。

→ 設定了兒童鎖定（第 5 頁）。

光碟托架打不開，前面板顯示屏上出現“E-LOCK” (TRAY LOCKED) (托架已上鎖)。

→ 聯絡您的 Sony 經銷商或當地授權的 Sony 服務機構。

前面板顯示屏上出現“C13”。

→ 用乾淨的布清潔光碟或檢查其格式。

前面板顯示屏上出現“C31”。

→ 重新正確插入光碟。

可播放檔案格式

視頻：MPEG-1 (Cyber-shot 資料)

相片：JPEG (DCF 格式)

音樂：MP3 (mp3PRO 除外) / WMA (WMA Pro 除外) *1, *2/AAC*1, *2/LPCM/WAVE

*1 無法播放具有版權保護 (數位權利管理) 的檔案。

*2 播放機不能播放 Lossless 之類的編碼檔案。

支援的副檔名：“.mpg”、“.mpeg”、“.jpg”、“.mp3”、“.wma”、“.m4a”、“.wav”

支援的光碟：DVD、DVD ± RW / ± R / ± R DL、Music CD / Super VCD、CD-R / -RW

- 根據 ISO 9660 Level 1 / Level 2 或其擴展格式 Joliet 錄製 DATA CD。
- 根據 UDF 錄製 DATA DVD。
- 本播放機將播放上述任何檔案，即使檔案格式不同。播放這類資料可能會產生噪音，並可能損壞揚聲器。
- 播放複雜的資料夾等級可能需要一些時間。建立的文件夾不要超過兩個等級。
- 視編碼 / 錄製狀況而定，有些視頻、相片和音樂檔案可能無法播放。
- 開始播放並進入下一個或另一個文件夾 / 檔案可能需要一些時間。
- 本播放機最多能識別 200 個文件夾和 600 個檔案。當選擇“相片 (音樂)”時，最多能識別 300 個音樂檔案和 300 個相片檔案。
- 本播放機可能無法播放由兩個或更多視頻檔案合成的檔案。
- 本播放機無法播放尺寸超過 720 (寬) × 576 (高) / 2 GB 的視頻檔案。
- 視檔案而定，可能無法流暢播放。建議您以較低位元率建立檔案。
- 本播放機可能無法流暢地播放 DATA CD 上的高位元率視頻檔案。建議使用 DATA DVD 進行播放。

關於可錄媒體的注意事項

由於光碟錄製品質、物理狀況或錄製設備和編輯軟體的特性，某些可錄媒體無法用本播放機播放。如果光碟未正確錄製完成，也無法播放。另外，有些以 Packet Write 格式製作的 DATA 光碟將無法播放。

僅適用於無法播放含有複製保護影像的播放機

DVD-VR 模式中具有 CPRM (Content Protection for Recordable Media (可錄媒體內容保護)) 保護的影像可能無法播放。

播放 DVD 和 VIDEO CD 時的注意事項

有些 DVD 和 VIDEO CD 的播放操作方法可能受到軟體製作者的特別規定。由於本機是根據軟體製作者設計的光碟內容播放 DVD 和 VIDEO CD 的，所以並不能獲得所有的播放功能。請參閱 DVD 或 VIDEO CD 附帶的使用說明書。

關於光碟的注意事項

本機是專為播放符合 Compact Disc (CD) 標準光碟而設計。DualDisc 和某些採用版權保護技術編碼的音樂光碟不符合 Compact Disc (CD) 標準。因此，這些光碟可能與本機不相容。

規格

系統

雷射：半導體雷射

輸出

- AUDIO OUT (L/R)：音頻插孔
- DIGITAL OUT (COAXIAL)：音頻插孔
- COMPONENT VIDEO OUT (Y, Pb, Pr)：音頻插孔
- VIDEO OUT：音頻插孔

一般

- 電源要求：~ 110 V, 60 Hz
- 功耗：6 W
- 尺寸 (約)：320 × 38 × 209 mm (寬 / 高 / 深) 包括突出部分
- 質量 (約)：1.1 kg
- 工作溫度：5 °C 至 35 °C
- 工作濕度：25 % 至 80 %

提供的附件

- 音頻 / 視頻連接線 (音頻插頭 × 3 ↔ 音頻插頭 × 3) (1)
- 遙控裝置 (遙控器) (1)
- R6 (AA 尺寸) 電池 (2)

規格與設計若有改變，恕不另行通知。

LANGUAGE CODE LIST

☞ GB (page 6), CT (第 6 頁)

Code Language	Code Language	Code Language	Code Language
1027 Afar	1183 Irish	1347 Maori	1507 Samoan
1028 Abkhazian	1186 Scots Gaelic	1349 Macedonian	1508 Shona
1032 Afrikaans	1194 Galician	1350 Malayalam	1509 Somali
1039 Amharic	1196 Guarani	1352 Mongolian	1511 Albanian
1044 Arabic	1203 Gujarati	1353 Moldavian	1512 Serbian
1045 Assamese	1209 Hausa	1356 Marathi	1513 Siswati
1051 Aymara	1217 Hindi	1357 Malay	1514 Sesotho
1052 Azerbaijani	1226 Croatian	1358 Maltese	1515 Sundanese
1053 Bashkir	1229 Hungarian	1363 Burmese	1516 Swedish
1057 Byelorussian	1233 Armenian	1365 Nauru	1517 Swahili
1059 Bulgarian	1235 Interlingua	1369 Nepali	1521 Tamil
1060 Bihari	1239 Interlingue	1376 Dutch	1525 Telugu
1061 Bislama	1245 Inupek	1379 Norwegian	1527 Tajik
1066 Bengali;	1248 Indonesian	1393 Occitan	1528 Thai
Bangla	1253 Icelandic	1403 (Afan)Oromo	1529 Tigrinya
1067 Tibetan	1254 Italian	1408 Oriya	1531 Turkmen
1070 Breton	1257 Hebrew	1417 Punjabi	1532 Tagalog
1079 Catalan	1261 Japanese	1428 Polish	1534 Setswana
1093 Corsican	1269 Yiddish	1435 Pashto;	1535 Tonga
1097 Czech	1283 Javanese	Pushto	1538 Turkish
1103 Welsh	1287 Georgian	1436 Portuguese	1539 Tsonga
1105 Danish	1297 Kazakh	1463 Quechua	1540 Tatar
1109 German	1298 Greenlandic	1481 Rhaeto-	1543 Twi
1130 Bhutani	1299 Cambodian	Romance	1557 Ukrainian
1142 Greek	1300 Kannada	1482 Kirundi	1564 Urdu
1144 English	1301 Korean	1483 Romanian	1572 Uzbek
1145 Esperanto	1305 Kashmiri	1489 Russian	1581 Vietnamese
1149 Spanish	1307 Kurdish	1491 Kinyarwanda	1587 Volapük
1150 Estonian	1311 Kirghiz	1495 Sanskrit	1613 Wolof
1151 Basque	1313 Latin	1498 Sindhi	1632 Xhosa
1157 Persian	1326 Lingala	1501 Sangho	1665 Yoruba
1165 Finnish	1327 Laothian	1502 Serbo-	1684 Chinese
1166 Fiji	1332 Lithuanian	Croatian	1697 Zulu
1171 Faroese	1334 Latvian;	1503 Singhalese	
1174 French	Lettish	1505 Slovak	
1181 Frisian	1345 Malagasy	1506 Slovenian	1703 Not specified

ISO 639: 1988 (E/F) standard

PARENTAL CONTROL AREA CODE LIST

☞ GB (page 3), CT (第 3 頁)

Code Area	Code Area	Code Area	Code Area
2044 Argentina	2165 Finland	2362 Mexico	2149 Spain
2047 Australia	2174 France	2376 Netherlands	2499 Sweden
2046 Austria	2109 Germany	2390 New Zealand	2086 Switzerland
2057 Belgium	2248 India	2379 Norway	2528 Thailand
2070 Brazil	2238 Indonesia	2427 Pakistan	2184 United Kingdom
2079 Canada	2254 Italy	2424 Philippines	
2090 Chile	2276 Japan	2436 Portugal	
2092 China	2304 Korea	2489 Russia	
2115 Denmark	2363 Malaysia	2501 Singapore	



* 1 - 4 2 6 6 0 2 3 3 1 *

4-266-023-31(1)

Printed in China

<http://www.sony.net/>